

Instructions for Model No.

72594, '95
72583
72625 & '26
 after serial #37460

- 1) Set up pads along side car. Scale pads are marked RF, LR, etc. They are closely matched and can be interchanged if needed.
- 2) Connect cables from control box - note RF, LR, LF, etc. Cables **MUST** be connected to this corner of the car.
- 3) Turn on control box, allow to warm up for a minute or so. Push Zero. This defines "0" weight. **DON'T PUSH 'ZERO' AFTER CAR IS ON SCALES.**
- 4) Lift car and place pads under wheels. For more consistant cross weights "shake" car up & down at each corner to settle out any shock or suspension friction.


Shows Low Batt Change Soon

on display when batteries needs replacement (at this point you still have approximately 2 hours of run time). Power consumption is so low it should not be necessary to replace more than once per season. 2 Battery 'drawers' or holders are located on the front side of the control box. Use your fingernail in the notch, push down slightly, and pull out. Replace both batteries with quality 9 volt alkaline. If needed scale will run on only 1 battery (don't leave 1 old one in place). There is no recharger or rechargable batteries since the battery life is so long.

Weights & Partial % Displays

These 2 buttons let you show either 4 wheel weights and cross - OR - all partial weights and %. You can go back and forth as needed. **Do NOT reZero.**

There are 2 different displays for both **Wheel Weights** and **Partial %**. See examples at the right. If you want the other one push the **Wheel Weights** or **Partial %** button and hold for 6 seconds. That display will change and will stay until you change it again. NOTE: "Bite" is LR minus RR.

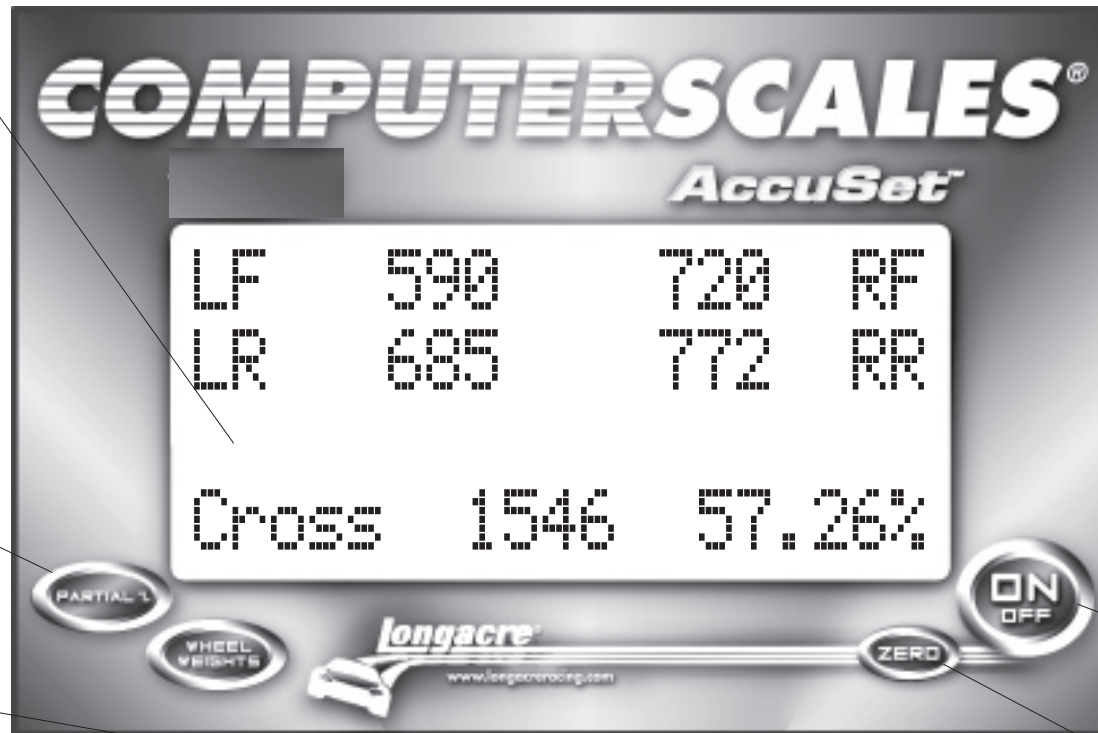

LEFT	1436	51.24%
REAR	1531	53.13%
CROSS	1649	57.77%
TOTAL	2806	BITE 157

LF	590	720	RF
LR	685	772	RR
Cross	1546	57.26%	

OR

LEFT	1436	51.23%
RIGHT	1436	51.23%
FRONT	1531	53.61%
REAR	1531	53.19%

OR

LF	590	720	RF
LR	685	772	RR
TOTAL	2806		
Cross	1546	57.26%	

General Tips:

- Keep the system clean and dry. Do not drop either the pads or the control box.
- Route the cables so that no one trips and they do not get run over by floor jacks.
- Store in a clean dry place. Remove batteries if scale will be stored unused for more than 6 months
- Capacity per scale pad is:
 1500 lbs. for #72595 (15" pad)
 1100 lbs. for #72583 (12" pad)
 400 lbs. for #72625 & 26 (kart pad)
WEIGHT OVER THIS COULD DAMAGE LOAD CELLS and cannot be warrantied.
- Keep away from static electricity.

On/Off:

Turn on before putting car on scales. Allow to warm up for a minute or so.

Zero:

Push BEFORE putting car on scales. DON'T push Zero AFTER car is on scales.

Metric readout?

See reverse side for instructions to convert to metric - kgm.

NOTE: If service is ever needed please call factory first. You may be able to send back just part of the system, saving you freight.

longacre

Longacre Racing Products, Inc.
 16892 146th St SE, Monroe, Wa. 98272
 (360) 453 2030
 www.longaceracing.com