


Deluxe Memory Pyrometer Quick Start Instructions - P/N 50690

Control Panel

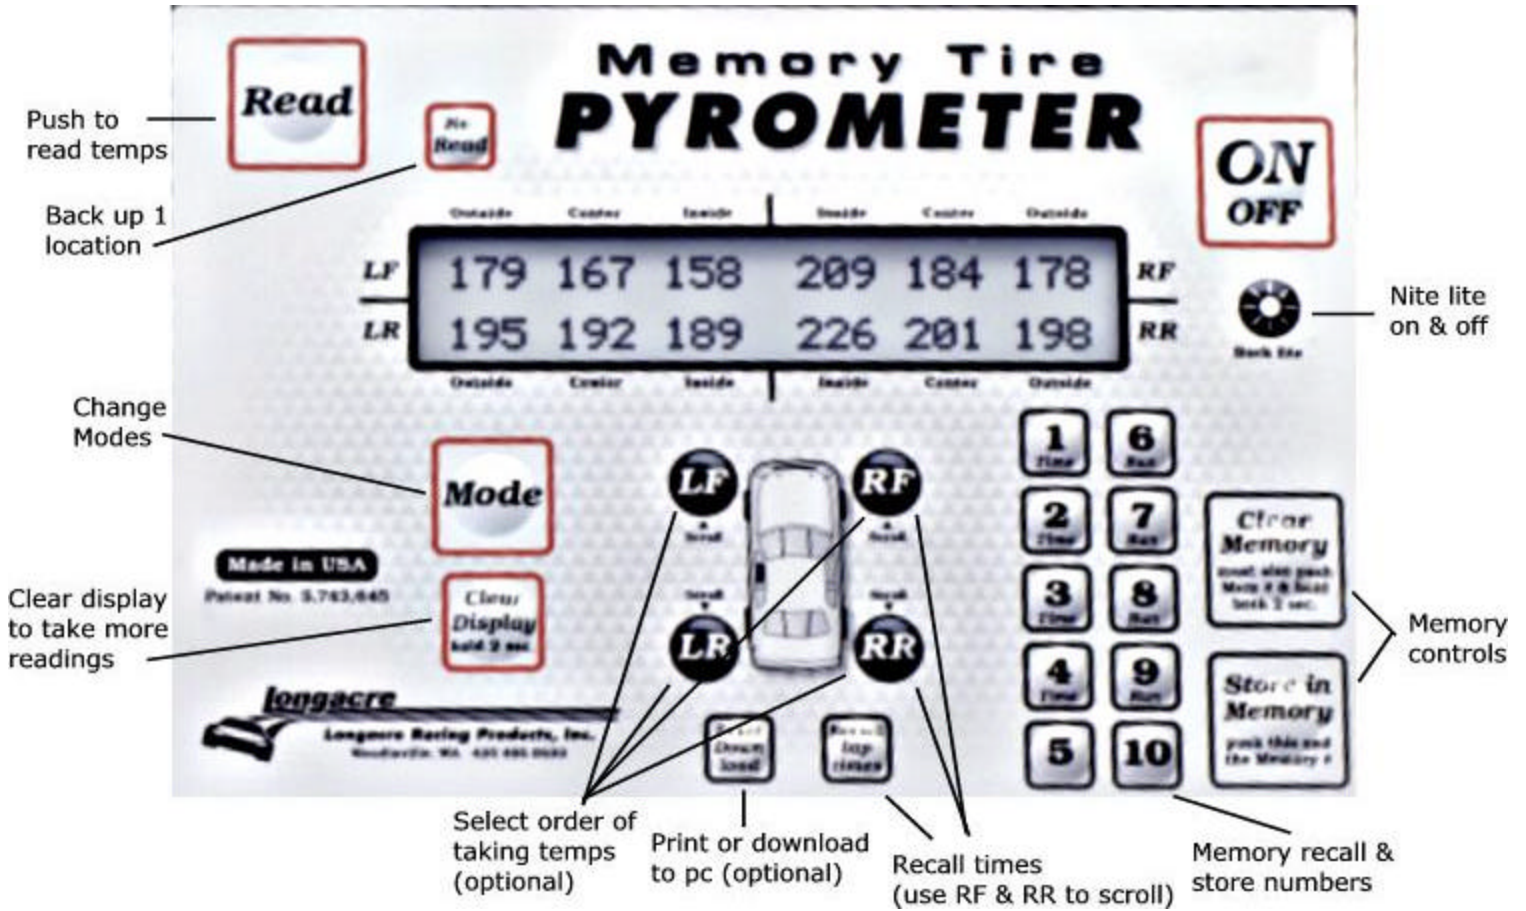

Memory Pyrometer - Quick Start Instructions

See full instructions for details and further information.

- **Plug in probe:** Note wide and narrow spades on plug. Don't force it.
 - **Turn on & Clear display:** Any temps must be cleared to take new readings. Save old temps in Memory, if needed. Push 'Clear Display' and hold for 2 seconds.
 - **Order of temps:** Takes temps in the following order: RF, RR, LR, LF. Take outside first, center, then inside. Active temp is indicated by an arrow. You can also take temps in any order by pushing the small buttons by the wheel on the car icon.
 - **Take temps:** Stick probe into tire and push 'Read' button. Leave the probe in the tire until the display moves. Pyrometer will read the correct temp, freeze it on the display, and move to the next location. 'Re-Read' button backs up 1 location.
 - **Store in Memory:** Push 'Store in Memory' and 'Memory #' at the same time.
 - **Recall Memory:** Simply push and hold any 'Memory #'.
 - **Clear Memory:** Push 'Clear Memory' and 'Memory #' at the same time and hold for 2 seconds.
 - **Care:** Be careful of probe tip. Keep pyrometer dry & out of extreme hot or cold.
-

Temperature Averaging - Quick Start Instructions

See full instructions for details and further information.

- **To get into Average or AVG Mode 2, push 'Mode' once**
Any temps that were on the display will stay. Push 'Mode' twice to go back to taking temps. (Pushing 'Mode' once will take you to Stopwatch Mode 3.) You must display all 12 temps to Average.
- **To display Average temps use the Memory buttons:**
 - #1 - Shows the average of the 3 recorded temps for all 4 tires.
 - #2 - Shows the front and rear averages and differences.
 - #3 - Shows the right and left averages and differences.
 - #4 - Shows the diagonal averages - RF/LR and LF/RR - and differences.
 - #5 - Recalls the temps you are averaging.
- **To recall temps to Average:** Push the 'Memory' button where the temps are stored and hold it for 3 seconds. Those temps will come up onto the display. They you can display the Averages as above. These will stay until cleared.

- **To enter temps to Average:** Clear display first - hold button 2 seconds. Use the 'Memory' buttons 1-10 to enter the temps. After each temp push the 'Read' button. Enter temps in the same order as you would actually take them. All 12 must be entered to Average. Display Averages as above.
-

Stopwatch - Quick Start Instructions

See full instructions for details and further information.

- **To get into Stopwatch Mode 3, push 'Mode' TWICE:** Mode 1 is tire temp reading, Mode 2 is Temp Average. Push again to go back to Mode 1.
- **Use 'Memory' buttons #1 to 4 to start timing:** They are marked 'Time' and correspond to #1 to 4 on the display.
- **To start timing, push #1 button:** (or 2, 3, or 4) The display will show the time running. At the end of lap 1 push the same 'Memory' button. The time for lap 1 will be displayed. Continue for lap 2 & on. Lap counter is automatic.
- **Watch lap times run:** Push the 'Memory' button to the right of the timing button you are using - #6 for #1, #7 for #2, etc. They are marked 'Run'.
- **Stop timing & reset:** Push the timing button 1 - 4 and hold for 2 seconds to reset only that one. 'Clear Display' button resets all 4.
- **Automatic shutoff after 10 minutes of no timing:** To save battery. Times running are lost but not Memory. Comes back on in Mode 1.
- **Recall times from Memory, push 'Recall Lap Times':** Use RF (or LF) and RR (or LR) to scroll up & down. Push again to return to timing. Recall Memory is indicated by an M - as in #1 17.63 L2M.